GODDESS

RCB 2143GS7
RCB 2155GS7

NÁVOD K POUŽITÍ
INSTRUCTION MANUAL

Chladnička / Fridge

CZ

ENG

OBSAH

Ilustrace uspořádání	2
Pokyny pro instalaci	3
Bezpečnostní upozornění	4
Provoz	4
Ovládací panel	6
Čištění a údržba	8
Řešení problémů	9
Technické specifikace	10

- Před použitím si prosím přečtěte tento návod k použití.
- Vzhled chladničky závisí na výrobní úpravě.
- Kvůli vylepšením ve výrobě se nemusí vaše chladnička zcela shodovat s popisem v tomto návodu k použití.

Obecné

Tento typ chladničky využívá vysoce účinný kompresor a klasické uspořádání. Poskytuje výhody nízké spotřeby elektřiny, dynamické mrazící kapacity a snadnosti použití.

Ilustrace uspořádání

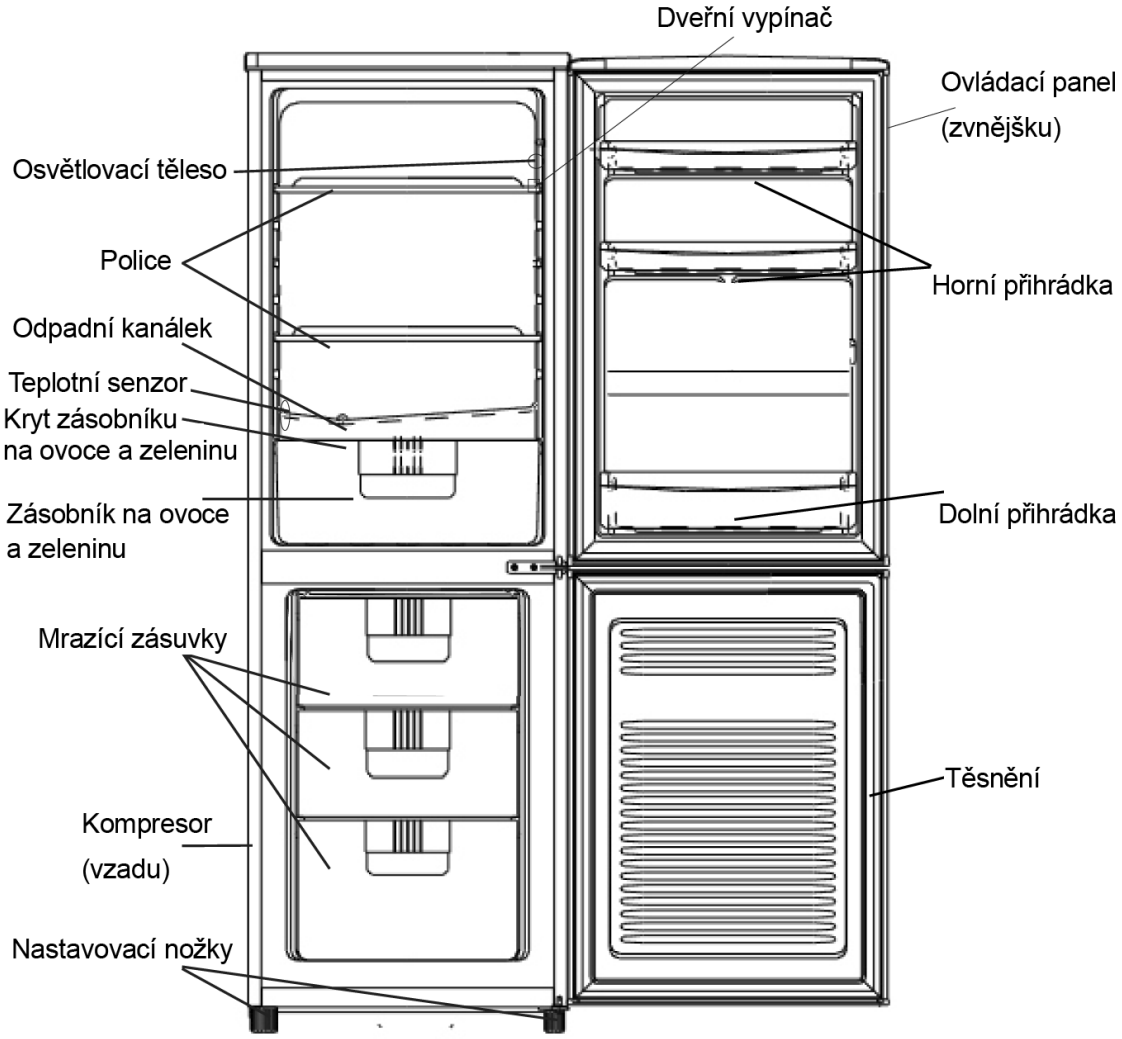

Poznámka: Tato ilustrace je pouze orientační, přesné uspořádání viz skutečný výrobek.

Pokyny pro instalaci

1. Při přemísťování chladničku nenaklánějte o více než 45° ze vzpřímené polohy.
   Při dopravě se vyvarujte nárazů a silných vibrací.
   Při manipulaci se součástmi chladničky jako je kondenzor, dveře a jejich rukojeť nepoužívejte sílu, aby nedošlo k deformaci chladničky a tak k negativnímu vlivu na její provoz.

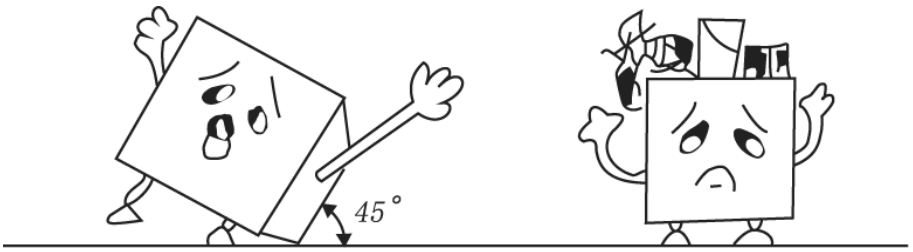

2. Ujistěte se, že kolem chladničky je dostatečný prostor, aby mohla správně fungovat.

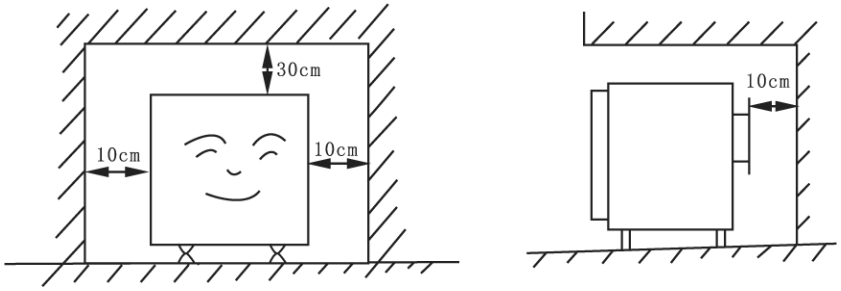

3. Chladničku je třeba chránit před vysokými teplotami, slunečním svitem a vlhkostí. Je také zakázáno používat chladničku venku.

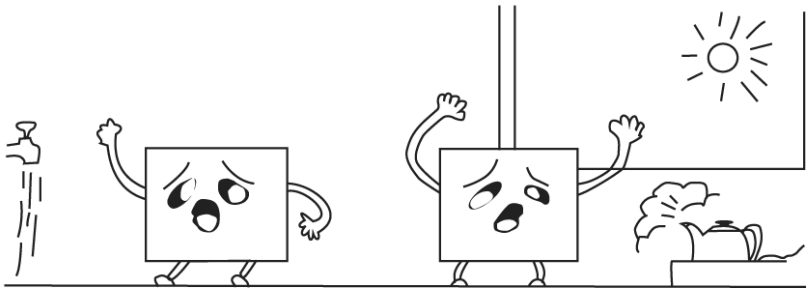

4. Chladničku je třeba umístit na pevný povrch, aby nezpůsobovala hluk.

5. Pro vaši bezpečnost a ochranu je tato chladnička uzemněna prostřednictvím kolíku síťového kabelu, pokud ji zapojíte do odpovídající elektrické zásuvky. Pokud si nejste jisti, zda je vaše zásuvka řádně uzemněná, poraďte se s kvalifikovaným elektrikářem.

Bezpečnostní upozornění

1. Před použitím chladničky je třeba zkontrolovat, zda je připojované napětí stejné jako přede psané napětí.

2. Síťová zástrčka by měla být zapojena do samostatné zásuvky, aby nedocházelo k přehřívání elektrického kabelu v důsledku zapojení dalších zástrček.

3. Zabraňte dětem, aby manipulovaly s ovládacími prvky nebo si s chladničkou hrály.

4. Na dveře chladničky nezavěšujte těžké předměty, aby nedošlo k jejímu převržení.

5. Je nebezpečné jakýmkoliv způsobem měnit specifikace nebo se pokoušet výrobek upravovat.

6. Do mrazícího oddílu nevkládejte neprodyšně uzavřené nádoby ani sycené tekutiny, například šumivé nápoje, protože by při zmrazení vytvořily tlak v nádobách, což by mohl vést k jejich roztržení a poškození mrazícího oddílu nebo zranění osob.

7. Na chladničku nelijte vodu. Mohlo by dojít k poruše chladničky nebo zranění elektrickým proudem.

8. V chladničce neskladujte hořlavé materiály jako líh, benzín, kapalný plyn, lepidla, atd.

9. Kostky a kousky ledu by neměly být konzumovány ihned po vytažení z mrazáku, protože by mohlo dojít k poškození pokožky v důsledku nízké teploty.

10. Pokud měníte žárovku nebo pokud chladničku delší dobu nepoužíváte, odpojte ji ze zásuvky.

11. Potraviny v chladícím prostoru nesmí být příliš blízko teplotního senzoru ani odpadního kanálku.

Provoz

1. Jestliže chladničku poprvé uvádíte do provozu, připojte síťový kabel, zvolte provozní režim a nechte chladničku běžet bez vložených potravin, a to po dobu asi 2 až 3 hodin. Poté nastavte teplotu na požadovanou úroveň a vložte do chladničky potraviny.

2. Chladící prostor se používá k uskladnění čerstvých potravin, které nemusí být zmraženy. Na zásobník pro ovoce a zelenu je třeba nasadit kryt, aby byla teplota v zásobníku stabilní. V mrazícím oddíle jsou zásuvky pro zmrazování potravin a jejich uskladnění.

3. Nedávejte do chladničky příliš velké množství potravin.
   Neotvírejte příliš často dveře, aby mohla být v chladničce udržována stálá teplota. Teplé potraviny nechte před uložením do chladničky vždy vychladnout na pokojovou teplotu. Ušetříte tak elektřinu.

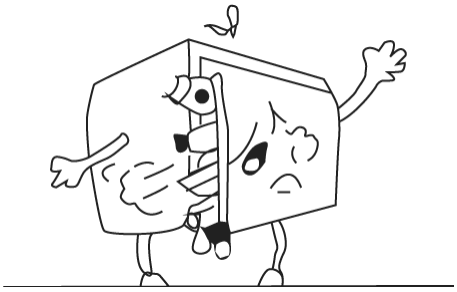

4. Námraza v chladícím prostoru se odmrazuje automaticky a voda může odtékat do odkapávací misky pod kompresorem. Zkondenzovaná voda se odpaří teplem kompresoru. Pokud není odvodňovací hadice v prostoru kompresoru správně nainstalována, nainstalujte ji před použitím znovu.
   Mrazící oddíl odmrazte vždy, když vrstva námrazy na povrchu dosáhne 3 - 4 mm. Při odmrazování vyjměte veškeré potraviny a příslušenství, odpojte síťový kabel a otevřete dveře. Jakmile námraza roztaje, vylijte vodu a vnitřek chladničky vysušte. Chladničku poté znovu spusťte připojením síťového kabelu ke zdroji napájení.

Upozornění

- Při odmrazování nikdy nepoužívejte k odstranění námrazy na povrchu ostré nebo kovové předměty, protože by došlo k poškození výparníku nebo vnitřního pláště.

- V mrazícím oddíle neskladujte nápoje v lahvích, aby nedošlo k jejich prasknutí a poškození chladničky, ani potraviny bez obalu.

- Mezi jednotlivými baleními potravin ponechávejte prostor, aby mohl v chladícím i mrazícím oddílu volně cirkulovat chladný vzduch.

Ovládací panel

Ovládací panel je určen k volbě provozní teploty a zobrazování teploty v chladícím a mrazícím prostoru. Nachází se v horní části horních dveří.
Na ovládacím panelu jsou 3 tlačítka. Jsou to tlačítko pro šetření energií, tlačítko pro standardní provoz a tlačítko pro rychlé zmrazení.

- Funkce tlačítka pro rychlé zmrazení: Pokud jenom vložíte do mrazáku potraviny a chcete je rychle zmrazit, můžete to provést tímto tlačítkem. Po stisknutí tohoto tlačítka zobrazí LCD displej teplotu oddílu a příslušné oznámení. Pokud se chladnička přepne do tohoto režimu a stisknete jiné tlačítko nebo pokud byla chladnička v tomto režimu 26 hodin, automaticky režim rychlého zmrazení opustí a vrátí se do původního režimu.

- Funkce tlačítka pro šetření energií: Pokud stisknete toto tlačítko, bude chladnička pracovat s následujícím nastavením teplot: +7°C v chladícím oddílu a -15°C v mrazícím oddílu. Zároveň zobrazí LCD displej skutečnou teplotu v chladícím oddílu a v mrazícím oddílu spolu s příslušným oznámením.

  Pokud stisknete jiná tlačítka nebo se nastavení teploty liší od výše uvedené teploty nastavené v režimu nastavení teploty, opustí chladnička režim šetření energií. Doporučujeme použí vat režim šetření energií v běžné době provozu.

- Funkce tlačítka pro standardní provoz: Pokud stisknete toto tlačítko, bude chladnička pracovat s následujícím nastavením teplot: +5°C v chladícím oddílu a -18°C v mrazícím oddílu. Zároveň zobrazí LCD displej skutečnou teplotu v chladícím oddílu a v mrazícím oddílu spolu s příslušným oznámením.
  Pokud stisknete jiná tlačítka nebo se nastavení teploty liší od výše uvedené teploty nastavené v režimu nastavení teploty, opustí chladnička standardní režim.

- Funkce režimu nastavení teploty: V tomto režimu můžete volně nastavit teplotu pro chladící a mrazící oddíl. Tuto funkci aktivujete podržením tlačítka standardního režimu déle než 5 vteřin. Teploty chladícího a mrazícího oddílu budou na LCD displeji blikat. Poté znovu stiskněte tlačítko standardního režimu. Na LCD displeji se bude cyklicky zobrazovat teplota v daném rozsahu. Při každém stisknutí tlačítka standardního režimu se nastavená teplota zvýší o jeden stupeň. Pokud jste vybrali nastavení teploty a nestisknete tlačítko standardní ho režimu do 8 vteřin, řídící systém uloží váš příkaz, chladnička opustí režim nastavení teploty a bude pracovat podle nastavené teploty.
  Pokud jste vybrali teploty +5°C pro chladící oddíl a -18°C pro mrazící oddíl, bude chladnička pracovat ve standardním režimu a LCD displej zobrazí STANDARD. Pokud během nastavování teploty dojde k výpadku napájení, po obnovení napájení se jako výchozí provozní teplota nastaví poslední nastavená hodnota.

Poznámky:

1. Pokud jsou dveře chladničky otevřeny nebo pokud manipulujete tlačítky na ovládacím panelu, rozsvítí se pozadí LCD displeje barevně. Podsvícení bude aktivní po dobu 10 minut po zavření dveří nebo po posledním stisknutí tlačítka. Po 10 minutách se podsvícení vypne.

2. Signalizace otevřených dveří: Pokud nezavřete dveře chladničky do 30 vteřin, bzučák třikrát zapípá každých 30 vteřin jako připomenutí, že máte zavřít dveře. Pokud dveře nezavřete ani po 10 minutách, bzučák přestane pípat.

3. Pokud připojíte síťový kabel ke zdroji napájení, zapne se chladnička až po 3 vteřinách, a to kvůli stabilizaci napájení.

4. Řídící systém má funkci zpoždění 3 minut po znovuspuštění chladničky za účelem ochrany kompresoru.

5. Pokud se na LCD displeji zobrazí diagnostické kódy E1, E2 a E3 nebo jejich kombinace, pak požádejte své místní servisní středisko o provedení opravy, i když je teplota v chladničce dostatečně nízká.

Čištění a údržba:

1. Při čištění chladničky odpojte síťový kabel. Očistěte chladničku důkladně kusem tkaniny namočeným v neutrálním čistícím prostředku a poté ji omyjte čistou vodou. Nenanášejte vodu přímo na chladničku, aby nedošlo ke korozi a poruše provozu.

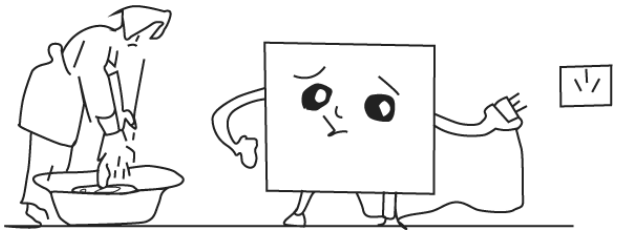

2. Nikdy nepoužívejte k čištění chladničky kyseliny, chemické roztoky, ředidlo, benzín a podobně, protože by mohlo dojít k poškození nátěru a plastických součástí.

3. Jednou nebo dvakrát do roka očistěte kompresor na zadní straně kartáčem nebo vysavačem od prachu, protože nahromaděný prach má vliv na výkon chladničky a má za následek zvýšenou spotřebu elektřiny.

Řešení problémů

1. Pokud chladnička nefunguje, ujistěte se, zda:
   - Do chladničky jde elektřina a že napětí je normální.
   - Není spálená pojistka.
   - Zástrčka je pevně zapojena v zásuvce.

2. Pokud chladnička dostatečně nechladí, ujistěte se, zda:
   - Je správně nastavena teplota.
   - Kolem chladničky je dostatečný prostor.
   - Dveře nejsou otvírány příliš často a příliš dlouho.
   - Chladnička není pod přímým slunečním světlem ani blízko tepelného zdroje.
   - V chladničce není příliš mnoho potravin nebo teplých potravin.

3. Pokud jsou potraviny v chladničce zmrzlé, ujistěte se, zda:
   - Je správně nastavena teplota.
   - V chladničce není příliš mnoho potravin s vysokým podílem vlhkosti.

4. Pokud chladnička pracuje příliš hlučně, ujistěte se, zda:
   - Je správně horizontálně vyvážená.
   - Nedotýká se okolních předmětů.
   - Nádoby nebo pevná balení uvnitř chladničky se navzájem nedotýkají.

5. Pokud slyšíte bzučivý nebo pulzující zvuk:
   - Jde o normální jev, protože chladivo je čerpáno přes spirály a potrubí do chladícího panelu (výparníku), tento jev není důvodem k reklamaci.

6. Pokud na podlahu vytéká voda:
   - Odvodňovací otvor je ucpaný.
   - Odvodňovací hadice v kompresorovém prostoru není správně nainstalována.

7. Pokud chladnička v létě běží nepřetržitě bez přestávky:
   - V chladničce je příliš mnoho potravin.
   - Nastavená teplota je příliš nízká.
   - Dveře chladničky jsou otvírány příliš často.
   - Kolem chladničky není dobré odvětrávání.
   - Dveře nejsou dovřeny nebo je zdeformované těsnění dveří.

Poznámka:

Během období s vysokou relativní vlhkostí se může na povrchu chladničky tvořit kondenzát. Nejde o závadu. Vlhkost stačí otřít.
Pokud chladnička správně nefunguje ani po provedení výše uvedených kontrol, kontaktujte prosím urychleně servisní oddělení.

Technické specifikace

* Podrobné technické specifikace viz typový štítek na zadní straně chladničky.
* Technické specifikace mohou být změněny bez předchozího upozornění v důsledku vylepšo vání výrobku.

INFORMAČNÍ LIST :

Obchodní značka	GODDESS	GODDESS
Model	RCB2143GS7	RCB2155GS7
Typ spotřebiče [3)]	7	7
Třída energetické účinnosti (A - nízká spotřeba el. energie, G - vysoká spotřeba el. energie)	A	A
Spotřeba energie za 365 dní [1)]	262	281
Užitný objem celkem (l)	177	197
z toho : objem chladící části z toho : objem mrazící části	117 60	127 70
Označení mrazícího prostoru	*(***)	*(***)
Doba skladování při poruše, doba náběhu teploty (h)	10	11
Mrazící výkonnost (kg/24hod)	6	7
Třída klimatu [2)]	N	N
Hlučnost (db(A))	39	39

[1)] Spotřeba energie v kWh/rok, založená na výsledcích normalizované zkoušky po dobu 24 hod. Skutečná spotřeba energie závisí na způsobu použití a umístění spotřebiče.

[2)] SN : okolní zeplota od +10°C do +32°C
N : okolní zeplota od +16°C do +32°C
ST : okolní zeplota od +18°C do +38°C
T : okolní zeplota od +18°C do +43°C

[3)] 3 = chladnička s prostory o nízké teplotě
4 = chladnička s prostory o nízké teplotě (*)
5 = chladnička s prostory o nízké teplotě (**)
7 = chladnička s prostory o nízké teplotě *(***)
8 = skříňová mraznička

Změna technických specifikací vyhrazena bez upozornění.

Informace o ochraně životního prostředí
Udělali jsme to nejlepší pro snížení množství obalů a zajistili jsme jejich snadné rozdělení na 3 materiály: lepenka, papírová drť a roztažený polyetylén. Tento přístroj obsahuje materiály, které mohou být po demontáži specializovanou společností recyklovány. Dodržujte prosím místní nařízení týkající se nakládání s balícími materiály, vybitými bateriemi a starým zařízením.

Likvidace starého elektrického a elektronického zařízení
Tento symbol na výrobku, jeho příslušenství nebo na jeho obalu označuje, že s výrobkem nesmí být nakládáno jako s domácím odpadem. Prosím dopravte tento výrobek na příslušné sběrné místo, kde bude provedena recyklace takového elektrického a elektronického zařízení. V Evropské unii a v ostatních evropských zemích existují sběrná místa pro použité elektrické a elektronické zařízení. Tím, že zajistíte správnou likvidaci výrobku, můžete předejít možným negativním následkům pro životní prostředí a lidské zdraví, které se mohou v opačném případě projevit jako důsledek nesprávné manipulace s tímto výrobkem. Recyklace materiálů přispívá k ochraně přírodních zdrojů. Z tohoto důvodu prosím nevyhazujte staré elektrické a elektronické zařízení do domovního odpadu. Pro podrobnější informace o recyklaci výrobku se obraťte na místní úřad, službu zajišťující likvidaci domácího odpadu nebo obchod, kde jste výrobek zakoupili.

Firma **HP Tronic Ústí nad Labem s.r.o.** je registrovaná u společnosti Elektrowin, a.s. pod číslem 05065/06-ECZ.

CONTENTS

Structure Illustration	2
Instructions for Installation	3
Cautions for Safety	4
Operation	4
Control Panel	6
Cleaning and Maintenance	8
Troubleshooting	9
Technical Specifications	10

- Please read this users operation manual before using.
- Appearance of refrigerator refer to production
- Cause production's improvement your refrigerator maybe not consistent with this user manual fully.

General

This type of refrigerator is widely used in places such as hotels, offices, students' dormitories and houses. It adopt high efficiency compressor and classic structure Distribution. It enjoys the advantages of low electric consumption, driving freezing capability and easy use.

tion

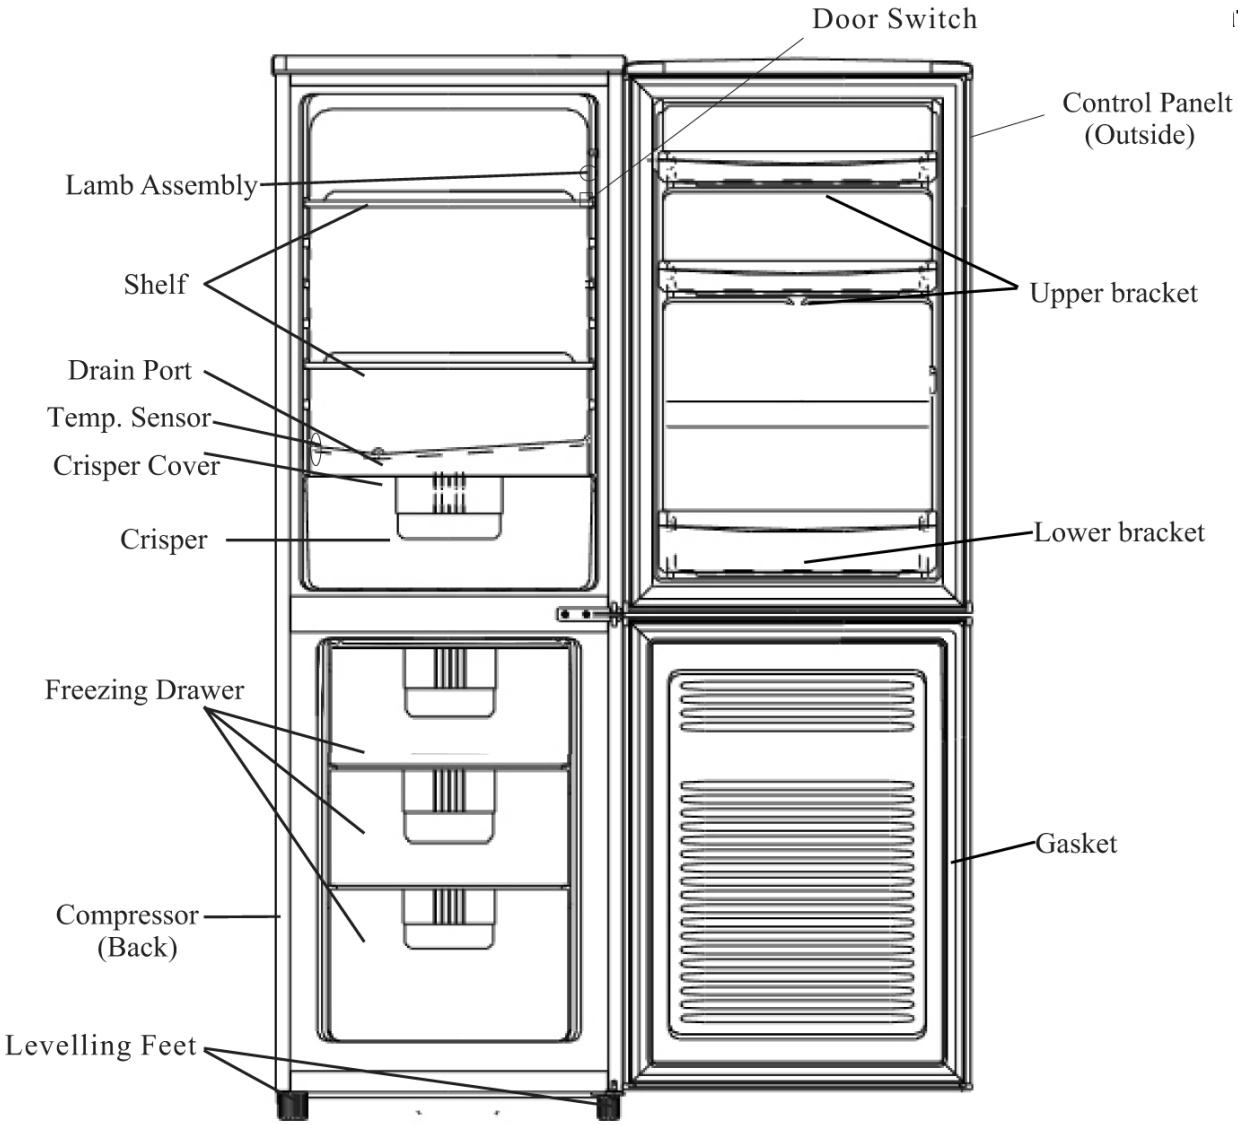

Note: This illustration is only for hinting, for detailed appendix please contrast the material object.

Instruction for installation

1. Do not tilt the refrigerator for more than 45 from upright when moving it.
   Avoid collision and violently vibration druing transportion. Do not apply force to any part such as the condenser, the door and its handle in order to prevent the refrigerator from deforming, or else its performance will be influenced.

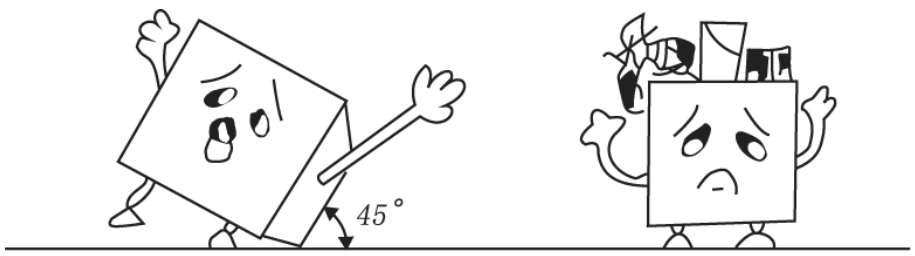

2. Ensure that there is enough space around the refrigerator in order to let it work well.

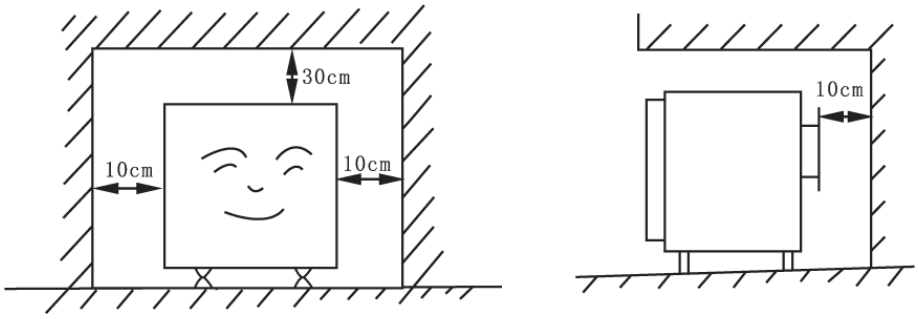

3. The refrigerator should be kept away from high temperature ,sunshine or humid conditions. It is also forbidden to use it outdoor.

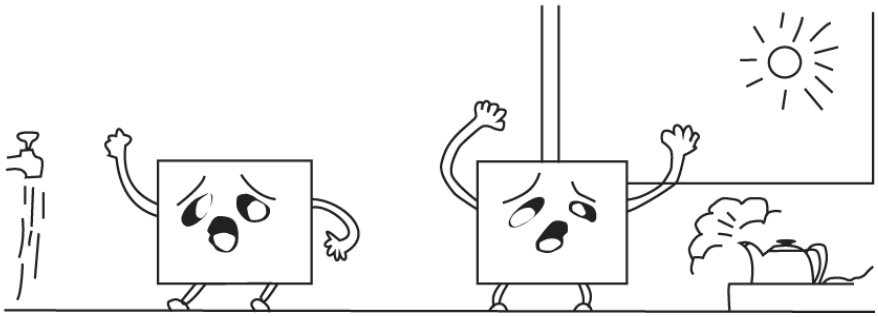

4. The refrigerator should be placed on solid floor to avoid much noise.

5. For your safety and protection, this unit is grounded through the power cord plug when plugged into a matching wall outlet. If you are not sure whether your wall outlet properly grounded, please consult a qualified electrician.

Cautions for Safety

1. It must be checked that the voltage used should be the same as the rated voltage before the refrigerator is used.

2. The power plug should have its own separated socket in order to prevent the electric wire from being over heated by other plugs.

3. Don not allow children to tamper with the controls or play with the product.

4. Don not hang heavy objects onto the door of the product to avoid the refrigerator turning over.

5. It is dangerous to alter the specifications or attempt to modify this products in any way

6. Do not place sealed container or carbonated liquids such as fizzy drinks into the freezer as it creates pressure on the container which may cause it to explode resulting to damage to the freezer or people.

7. Do not splash water on to the refrigerator. Otherwise it may cause malfunc tions of the refrigerator or electric shock.

8. Do not store flammable materials such as alcohol, gasoline, LP gas and glue etc, in the refrigerator.

9. Ice cubes and ice lollies should not be consumed immediately after removal from the freezer as it may result in low temperature skin abrasions.

10. When you change the light bulb or when the refrigerator is not in use for long periods, disconnect it from the electricity supply.

11. The food in fridge room can not be too close to the temperature sensor or drain port.

Operation

1. When operating the refrigerator for the first time, connect the electric wire, select the work mode and run it without loading any food. Usually this takes 2 or 3 hours. Then set the temperature at the desired setting and place foods into the refrigerator .

2. The fridge room is use to store fresh foods which need not to be frozen. The crisper cover should be put on the crisper to keep the temperature of crisper stable. There are drawers in freezer room which is used to freeze food and store frozen food

3. Do not put too many foods in the refrigerator . Open the door lesser in order to maintain the temperature of the refrigerator and always leave warm food to cool down to room temperature before putting into the refrigerator to save electric consumption.

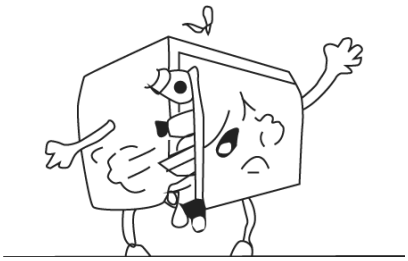

4. Frost in fridge room can defrost automatically and the water can flow to the water collection pan which support the compressor. The condensate water will evaporate by the heat of compressor. If the drain hose in compressor compartment is not installed well, do install it again before use.
   Defrost the freezer room whenever the layer of frost on the surface reaches 3 or 4 mm . When defrosting , remove all foods and appendix, disconnect the power supply cord and open the door. After the frost has melted , discard the water and dry up the interior of the Refrigerator, The refrigerator can then be restarted by connecting the power supply cord t.o the power source.

Cautions

- When defrosting , never use any sharp or metallic objects to remove the frost on the surface of the evaporator as this will damage the evaporator or inner case.

- Do not store bottled beverage in the freezing compartment , so as to prevent it from being broken and damaging the refrigerator, nor the food without packing.

- Keep space between the food packets to allow the cold air to circulate smoothly in fridge or freezer compartment.

Control Panel

The control panel is designed to select the operation/setting temperature and display the temperature of fridge room & freezer room. It is located in the top of the upper door.
There are 3 button in the control panel. These buttons are Energy Saving, Standard and Quick Freeze.

- Function for Quick Freeze button: When you just put food into freezer room And want to fast freeze the food, you can select this button. After you press this button , the LCD screen will display the temperature of compartment and its corresponding prompt. When the refrigerator come into this mode and you press other buttons or the unit has been in this mode for 26 hours, the unit will quit Quick Freeze mode and return the original mode.

- Function for Energy Saving button: When you depress this button, the machine will work as per the following temperature setting: for fridge room: +7 C; for freezer room: -15 C
  At the same time, the LCD screen will display the actual temperature of fridge room and freezer room as well as the corresponding prompt.

  If you depress other buttons, or the setting temperature is different from the above temperature settings in Adjusting Temperature mode, the refrigerator will quit the energy saving mode. We recommended to use energy saving mode in normal time.

- Function for Standard button: When you depress this button, the machine will work as per the following temperature setting: for fridge room: +5 C; for freezer room: -18 C At the same time, the LCD screen will display the actual temperature of fridge room and freezer room as well as the corresponding prompt.
  If you depress other buttons, or the setting temperature is different from the above temperature settings in Adjusting Temperature mode, the refrigerator will quit the Standard mode.

- Function for Adjust Temperature Mode: In this mode you can adjust the setting temperature freely for fridge and freezer room. To activate this function you can press the Standard button for over 5 seconds continuously and the temperature of fridge and freezer room will flicker on the LCD screen. Then depress the Standard button again, the setting temperature will circulate within a range on the LCD screen. Each time you press the Standard button, the setting temperature will increase one degree. If you have selected the setting temperature and do not depress the Standard button within 8 seconds, the control system will save your command and the unit will quit Adjust Temperature mode and operate according to your selected setting temperature.
  If you selected the temperature like this: for fridge room: +5 C; for freezer room: -18 C the unit will work in Standard mode and the LCD screen will display STANDARD.
  If the power supply is failed during your adjusting the setting temperature, when the power resumes, the lasting setting will be accepted as default for operation.

Notes:

1. When the fridge door is open or when you operate the button on control panel, the LCD screen back will be lighted in colour. It will last 10 minutes after you close the door or stop depressing button. After 10 minutes the back light will go out.

2. Door open alarm: If the fridge room door is not closed for 30 seconds, the buzzer will beep 3 sounds every 30 seconds to remind you of closing the door. If the door is not closed well after 10 ten minutes, the buzzer will stop beeping

3. When the power supply cord is connected to the power source, the refrigerator will dely 3 seconds to start in order to keep the power stable.

4. The control system has the function of 3 minutes delay to restart the machine to protect the compressor.

5. When E1, E2 and E3 or their combinations etc diagnose codes are displayed in LCD screen, even if the temperature in compartment is enough cold, you should ask your local service centre to repair it.

Cleaning and Maintenance:

1. When cleaning the refrigerator , disconnect the electric wire . Rub it carefully with a piece of cloth soaked with neutral cleanser , then wipe it clean with fresh Water. Do not wash the refrigerator with water directly to prevent the unit from rust and breakdown.

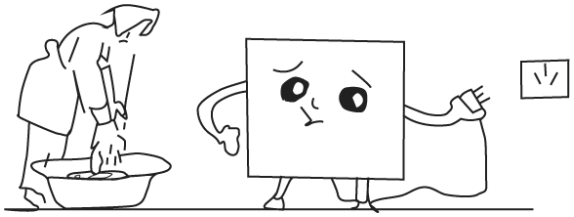

2. Never use acids , chemical solution , thinner , gasoline or the likes to clean the refrigerator because they may damage the painting cover and plastic parts of it

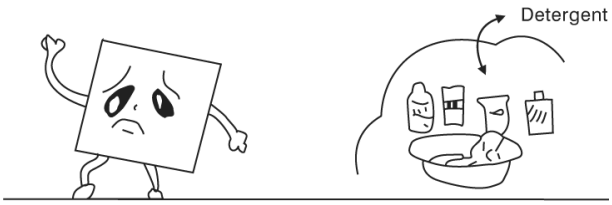

3. Once or twice a year dust the compressor at the back of the appliance with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cau se excessive electricity consumption.

Troubleshooting

1. When the refrigerator does not operate: ensure that
   - The electric power is supplied and the voltage is normal.
   - The fuse is not burned out .
   - The power plug is plugged in firmly in the socket .

2. When the refrigerator is not cool enough: ensure that
   - The setting temperature is at the correct setting .
   - There are enough space around the refrigerator .
   - The doors are not opened too frequently and for too long .
   - The refrigerator is not under direct sunlight or placed near the heat source .
   - There are not too many foods and hot foods in the refrigerator.

3. When the foods in the refrigerator are frozen: ensure that
   - The setting temperature is at the correct setting .
   - There are not too much foods which contain much moisture in the refrigerator .

4. When the refrigerator operates too noisily :
   - The refrigerator is properly levelled .
   - The refrigerator is not touching objects around it .
   - The containers or solid packages stored inside are not touching each other .

5. When you hear whirring sound or pulsating noise :
   - This is normal as the refrigerant is pumped through the coils or tubing to the cooling plate/evaporator. This sound is not reason for claim

6. When there is water spill to the ground :
   - The drain hole is blocked.
   - The drain hose in compressor compartment is not installed well.

7. Pokud chladnička v létě běží nepřetržitě bez přestávky:
   - There are too much food in the refrigerator .
   - The refrigerator is not touching objects around it .
   - The drain hose in compressor compartment is not installed well..
   - The setting temperature is too low..
   - The door of refrigerator is opened too frequently.
   - The ventilation is not good around the refrigerator.
   - The door is not closed well or the door gasket is deformed..

Note:

During the period of high relative humidity , moisture may form on the surface of the refrigerator . It is not malfunction . You may just wipe it up yourself .
If your refrigerator is still not functioning properly after making the above checks , please contact with the maintenance service department without any delay .

Technical Specifications

* For the detailed specifications please refer to the nameplate at the back of the refrigerator.
* The specifications are subject to change without prior notice due to product improvement.

INFORMATION LETTER :

Brand	GODDESS	GODDESS
Model	RCB2143GS7	RCB2155GS7
Type of appliance [3)]	7	7
Energy class (A - low consumption, G - high consumption)	A	A
Consumption for 365 days [1)]	262	281
Net capacity total (l)	177	197
thereof : fridge compartment (l) thereof : freezer compartment (l)	117 60	127 70
Designation of freezer compartment	*(***)	*(***)
Time of storage in case of the power interruption (hrs)	10	11
Freezing capacity (kg/24hrs)	6	7
Climatic class [2)]	N	N
Noise level (dB(A))	39	39

NOTES:
We reserve the right to make technical changes without notice in the interest of improvement.

WARNING: Do not use this product near water, in wet areas to avoid fire or injury of electric current. Always turn off the product when you don't use it or before a revision. There aren't any parts in this appliance which are reparable by consumer. Always appeal to a qualified authorized service. The product is under a dangerous tention.

Disposal of used electrical & electronic equipment

The meaning of the symbol on the product, its accesory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

HP Tronic Ústí nad Labem s.r.o. is registered by Elektrowin, a.s. under number 05065/06-ECZ.

GODDESS